



LEADERS IN ACCESS CONTROL FOR OVER 35 YEARS

P.O. BOX 815 BRUNSWICK, OH 44212-0815

PHONE: 330-225-3029 FAX: 330-225-3009

TOLL-FREE: 1-888-225-3029

PARTS LIST FOR MODELS

T80-T80T-T90-T90T

9/14/99

NO.	CONTROL SYSTEM	PCS.	UNIT COST
4-01	CAM	1	
4-02	CAM FOLLOWERS	2	
4-03	COMPRESSION SPRING	2	
4-04	GEARED PAWL	1-2	
4-05	PAWL SPRING	1-2	
4-06	SPRING PAWL	1	
4-09	SOLENOID/SPUR GEAR	0-3	
4-10	FORCE SUPPRESSER	1	
4-11	MICROSWITCH	1-2	
4-12	PIVOT SHAFT/COUPLING	1	
4-13	HOUSING-CONTROL HEAD	1	
4-15	SPRING CENTERER	3	
4-20	HEX BALL BEARING	2	
4-22	J-LOCK ANTI-BACKUP 1 WAY	1	
4-23	J-LOCK ANTI-BACKUP 1WAY/SOL	1	
4-24	J-LOCK ANTI-BACKUP 2 WAY SOL.	1	

COMPLETE CONTROL HEAD ASSEM.	UNIT COST
MANUAL MECHANICAL CONTROL	
WITH ONE-WAY ELECTRIC CONTROL	
WITH TWO-WAY ELECTRIC CONTROL	
3AMP 24VDC POWER SUPPLY	
P.C. BOARD (ONLY FOR INT12)	
STATUS INDICATOR LIGHT	

NO.	MAIN FRAME	PCS.	UNIT COST
4-25	MAIN FRAME 9T80/T90) 12X65.5"	1	
4-26	MAIN FRAME(T80/T90T) 12X96"	1x1.2	
4-27	CROSS FRAME 6' x48.75'	1-3	
4-28	" " 6"x21.25'	2	
4-29	" " (T80T/T90T) 6"x56.5"	1-2	
4-30	FRAME COVER 4.5x 12x 65.5"	1	
4-31	FRAME COVER 4.5x 12 x 96"	1	
4-32	WING COVERS 2x 6 x 21.5"	2-6	
4-33	#8 x 1/2" PHILLIPS HD SCREW	2	
4-34	3/8" - 16 x1.5 HEX HD BOLT	16	
4-35	3/8" -16 HEX NUTS, PLTD	16	
4-36	3/8" FLAT WASHER, PLTD	16	
4-37	3/8" FLAT WASHER SPLIT	16	
4-38	1/4" FLAT WASHER	5	
4-39	1/4" INTERNAL TOOTH WASHER	5	
4-40	CENTER BARRIER FOR T80T/T90T	1	

NO.	BOTTOM BEARING ASSEM.	UNIT COST
4-64	LOAD RUNNER BEARING	1
4-65	HEX BEARING EXTENSION	1
4-66	BOTTOM BEARING DUST COVER	1

CONTROL HOUSING

