




REVISION HISTORY		
SYMBOL	DESC.	DATE

HIGH SECURITY CANOPY

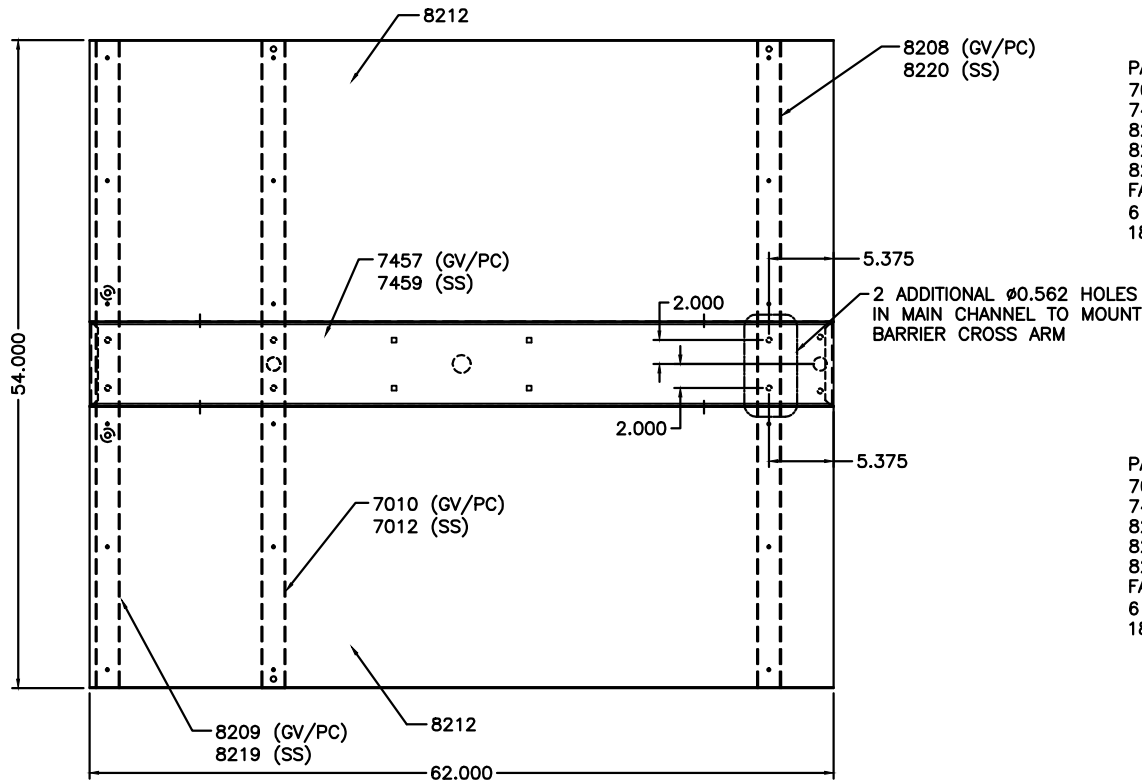


PARTS REQUIRED PER ASSEMBLY (GV/PC)
 7010 CROSS ARM SET QTY 1 (SHORT CROSS REPLACED BY 8209)
 7457 MAIN CHANNEL CROSS ARM ASSEMBLY QTY 1
 8208 BARRIER CROSS ARM CANOPY QTY 1
 8209 YOKE CROSS ARM CANOPY QTY 1
 8212 CANOPY WING QTY 2
 FASTENERS
 6 3/8 X 3 CARRIAGE BOLTS, 6 WASHERS, 6 LOCK WASHERS, 6 3/8 NUTS
 18 SELF TAPPING SCREWS CANOPY WING TO CROSS ARMS

PARTS REQUIRED PER ASSEMBLY (SS)
 7012 CROSS ARM SET QTY 1 (SHORT CROSS REPLACED BY 8219)
 7459 MAIN CHANNEL CROSS ARM ASSEMBLY QTY 1
 8220 BARRIER CROSS ARM CANOPY QTY 1
 8219 YOKE CROSS ARM CANOPY QTY 1
 8212 CANOPY WING QTY 2
 FASTENERS
 6 3/8 X 3 CARRIAGE BOLTS, 6 WASHERS, 6 LOCK WASHERS, 6 3/8 NUTS
 18 SELF TAPPING SCREWS CANOPY WING TO CROSS ARMS

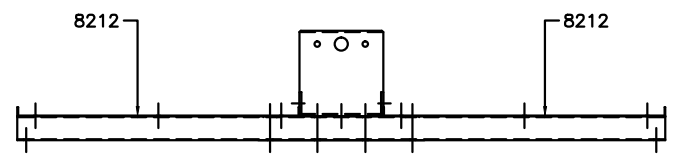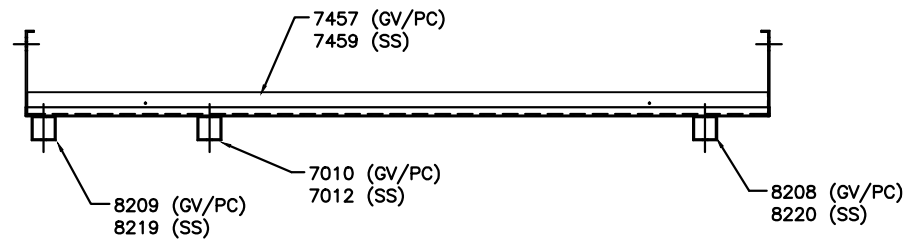

INSTALLATION NOTE:
 CANOPY WINGS INSTALL ON TOP OF CROSS ARMS

MATERIAL: AS ABOVE	SCALE: 1=16	APPROVED BY:	DRAWN BY: LC III
	DATE: 1/29/15		REVISED:
FINISH:	 CONTROLLED ACCESS, INC. 1636 West 130th Street Brunswick, Ohio 44212		330-273-6185
TOL. UNLESS OTHERWISE SPEC. .X ± .1 .XXX ± .015 .XX ± .03 ANGLES .5°			USA 1-800-942-0829
		HS427-S CANOPY ASSEMBLY	