




REVISION HISTORY		
SYMBOL	DESC.	DATE

HIGH SECURITY CANOPY

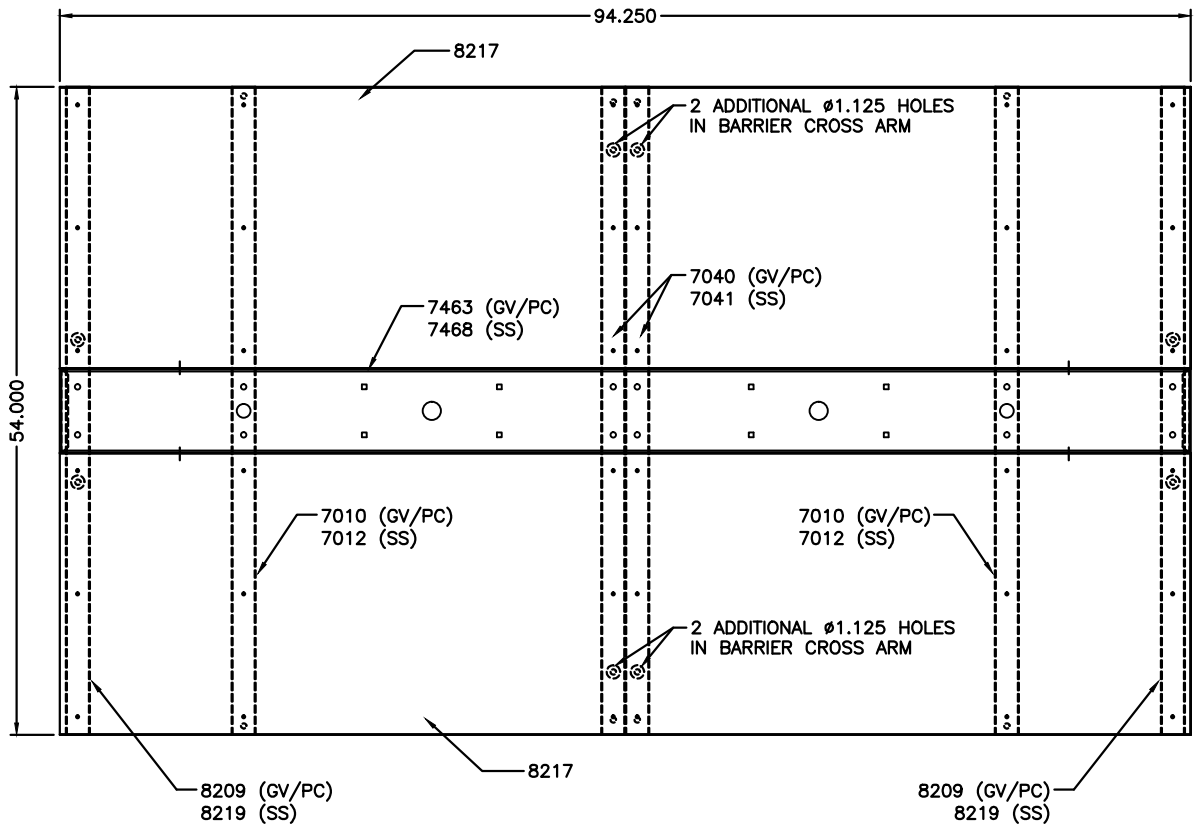

PARTS REQUIRED PER ASSEMBLY (GV/PC)
 7010 CROSS ARM SET QTY 1 (SHORT CROSS REPLACED BY 8209)
 7463 MAIN CHANNEL CROSS ARM ASSEMBLY QTY 1
 7040 BARRIER CROSS ARM QTY 2
 8209 YOKE CROSS ARM CANOPY QTY 1
 8217 CANOPY WING QTY 2
 FASTENERS
 12 3/8 X 3 CARRIAGE BOLTS, 12 WASHERS, 12 LOCK WASHERS,
 12 3/8 NUTS
 36 SELF TAPPING SCREWS CANOPY WING TO CROSS ARMS

PARTS REQUIRED PER ASSEMBLY (SS)
 7012 CROSS ARM SET QTY 1 (SHORT CROSS REPLACED BY 8219)
 7468 MAIN CHANNEL CROSS ARM ASSEMBLY QTY 1
 7041 BARRIER CROSS ARM QTY 2
 8219 YOKE CROSS ARM CANOPY QTY 1
 8217 CANOPY WING QTY 2
 FASTENERS
 12 3/8 X 3 CARRIAGE BOLTS, 12 WASHERS, 12 LOCK WASHERS,
 12 3/8 NUTS
 36 SELF TAPPING SCREWS CANOPY WING TO CROSS ARMS

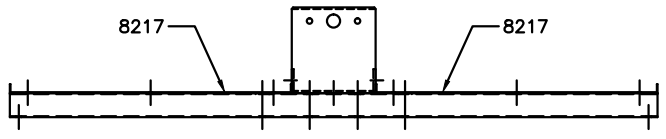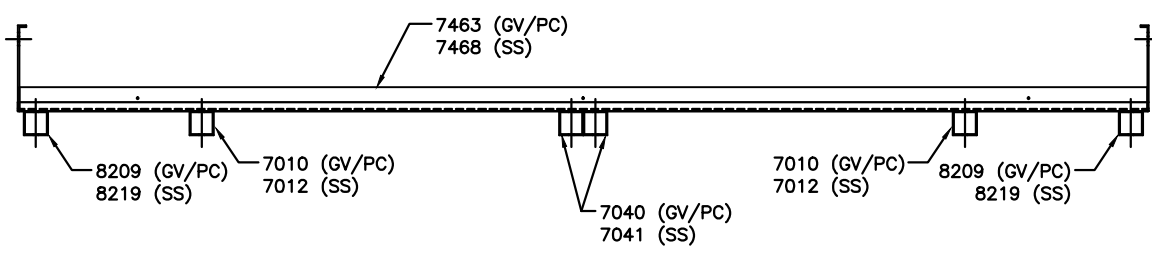

INSTALLATION NOTE:
 CANOPY WINGS INSTALL ON TOP OF CROSS ARMS

MATERIAL: AS ABOVE	SCALE: 1=16 DATE: 2/26/15	APPROVED BY:	DRAWN BY: LC III
FINISH: N/A			REVISED:
TOL. UNLESS OTHERWISE SPEC. .X ± .1 .XX ± .03	.XXX ± .015 ANGLES .5°	330-273-6185 FAX 330-273-4468 USA 1-800-942-0829 FAX 1-800-942-0828	
CONTROLLED ACCESS, INC. 1636 West 130th Street Brunswick, Ohio 44212		HS427-T CANOPY ASSEMBLY	